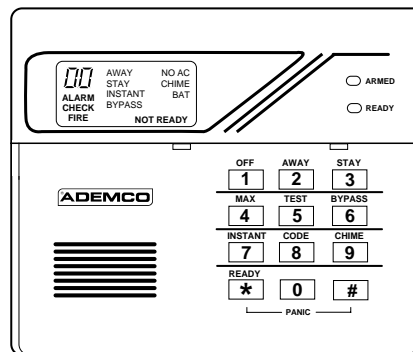


### USER GUIDE

#### Keypad Features

- Contains a display that provides 2-digit numeric for zone identification and pre-designated English language prompts (e.g., “ALARM”, “AWAY”, “STAY”, “CHECK”, etc.) for indicating system status. *See figure 1.*
- Contains a green “READY” LED that lights when the system is ready to arm (no zone faults are present).
- Contains a red “ARMED” LED that lights when the system is armed.
- Allows panic alarm activation. The panic alarms are activated by pressing key pairs [1] & [\*], [3] & [#], or [\*] & [#]. Whether these panic keys function and the type of panic alarms they will produce is determined by the control panel’s capability and programming. *(Check with your installer for the availability and type of alarm of these panic keys).*
- Contains function keys located behind a decorative door that are continuously backlit for ease in use. *(Check the User’s Manual that accompanies the control panel for detailed instructions on the use of these keys).*



**Figure 1: 6128RF Keypad/Transceiver  
with Front Door Removed**

- Contains a Piezo-electric sounder that pulses for fire alarms and sounds continuously for burglary and audible panic alarms.
- Has a space on the inside of the door for a zone ID label (supplied) on which the installer can write descriptions of the zones, for user reference.

#### User Mode

This mode gives you the capability of enabling and disabling individual wireless keys that have been directly programmed into the 6128RF. This is particularly useful if a user loses a wireless key.



This mode may only be accessed if the 6128RF is powered up for at least 1 minute. **Only** wireless keys programmed directly into the 6128RF may be enabled and disabled using this mode.

##### Enter the User Mode

Press the 1 & 3 keys simultaneously on the 6128RF for a few seconds.

##### Changing Status of a Transmitter

The display will show “dE” and a “-” flashing alternately. Enter the number of the wireless key transmitter (1-8).

The display then shows “d” with the wireless key number you entered and a 1 or 0 flashing alternately. A 1 indicates the wireless key is enabled, a 0 indicates disabled. Enter 1 to enable or 0 to disable the wireless key. All wireless keys are defaulted to 1 (enabled).

Press the [\*] to accept the entry.

Repeat the procedure for all the wireless keys you desire to change the status.

##### Exiting the User Mode

To exit the mode press the [\*] when the display is showing “dE” and a “-” flashing alternately.

